HAYWARD®

Installation, Operation & Service Procedures Pool and Spa/Hot Tub Heaters

Models H150, H200, H250, H300, H350 & H400

FOR YOUR SAFETY

WARNING: If the information in these instructions is not followed exactly, a fire or explosion may result causing property damage, personal injury, or death.

— Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

WHAT TO DO IF YOU SMELL GAS

- **Do not try to light any appliance.**
- **Do not touch any electrical switch; do not use any phone in your building.**
- **Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.**
- **If you cannot reach your gas supplier, call the fire department.**

— Installation and service must be performed by a qualified installer, service agency or the gas supplier.

CERTIFIED TM

CERTIFIED TM

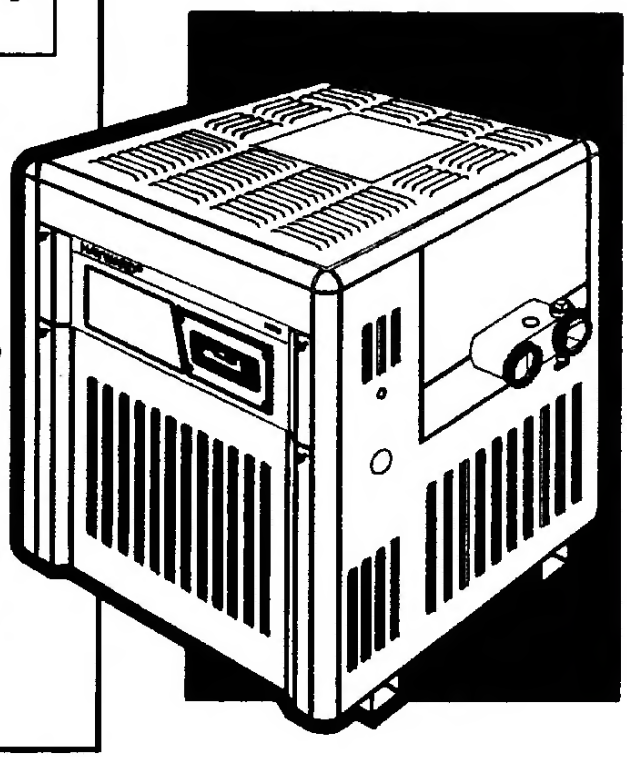

PATENT NO. 6026804

1302704001 0802

Downloaded from www.Manualslib.com manuals search engine

WARNING

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN

"CAUTION:TO REDUCE THE RISK OF ELECTRIC SHOCK,
DO NOT REMOVE COVER (OR BACK).
NO USER-SERVICEABLE PARTS INSIDE.
REFER SERVICING TO OUALIFIED SERVICE PERSONNEL."

Explanation of Graphical Symbols

The lightning flash with arrowhead symbol within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock to person.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instruction in the literature accompanying the appliance.

PRECAUTIONS

Read the Operating Instructions carefully and completely before operating tha unit. Be sura to kaap tha Oparating Instructions for future reference. All warnings and cautions in the Operating Instructions end on the unit should be strictly followed, as well as the sefety suggestions below.

Installation

1 **Weter and moisture** — Do not use this unit neer weter, such as near e bathtub, weshbowl, swimming pool, or the like.
2 **Heat** — Do not use this unit neer heet sources, including heating vents, stoves, or other appliances that generate heat. It also should not be placed in temperatures less than 5°C (41°F) or higher than 35°C (95°F).
3 **Mounting surfece** — Place the unit on a flat, even surface.
4 **Ventilstion** — The unit should be situated with adequate space around it so that proper heat ventilation is assured. Allow 10 cm (4 in.) clearance from the rear and fhe top of the unit, and 5 cm (2 in.) from each side.
- Do not place the unit on a bed, rug, or similer surface thet may block the ventilation openings.
- Do not install the unit in a bookcase, cabinet, or airtight rack where ventilation may be impeded.

5 **Objecfs and liquid sntry** — Take care fhaf objects or liquids do not gef inside the unit fhrough the ventilation openings.
6 **Carts and stands** — When placed or mounted on e stend or cert, the unit should be moved with care. Ouick stops, excessive force, end unavan surfacas may causa tha unit or cert to overtum or fell.

7 **Wsll or ceiling mounting** — The unit should not be mounted on a wall or ceiling, unless specified in the Opereting Instructions.

Electric Power

1 **Power sources** — Connact this unit only to power sources specified in the Operating Instructions, and as marked on the unit.
2 **Polarization** — As a safety feeture, some units ere equipped with polarized AC power plugs which can only be inserted one way into a power outlet. If it is difficult or impossible to insert the AC power plug into en outlet, turn the plug over end try agein. If it is not still inserted easily into the outlet, please call a qualified service technician to service or replace fhe outlef. To avoid defeating the safety feature of the polerized plug, do not force it into a power outlet.
3 **AC power cord**
- When disconnecting the AC power cord, pull it out by the AC power plug. Do not pull the cord ifself.
- Never handle the AC power plug with wet hands, as this could result in fire or shock.
- Power cords should be firmly secured to avoid being severely bent, pinched, or walked upon. Pay particular attention to the cord from the unit to the power socket.
- Avoid overloading AC power plugs and extension cords beyond their capacity, as this could result in fire or shock.

4 **Extension cord** — To help prevent electric shock, do not use e polarized AC power plug with an extension cord, recepfacle, or other outlet unless the polarized plug can ba completely inserted to prevent exposure of the bledes of the plug.
5 **When not in use** — Unplug the AC power cord from the AC power outlet if the unit will not be used for several months or more. When the cord is plugged in, e small amount of current continues to flow to the unit, even when the power is turned off.

Owner's record
For your convenience, record the model number and serial number (you will find them on the rear of your unit) in the space provided below. Please refer fo them when you contact your Aiwa deeler in cese of difficulty.

Model No.	Serial No. (Lot No.)
AV-D55	

Downloaded from www.Manualslib.com manuals search engine

Keyboard Controller at a glance

1. **Mouse** Functions as a left mouse click
2. **TV** Switches to live TV
3. **Guide** Presents the program guide on your Set-top box (STB)
4. **DVR** Presents a list of recordings on your STB
5. **Menu** Displays STB on-screen menu/guide when used with the FN key
6. **Zoom Out** Zooms out when used with the FN key
7. **Zoom In** Zooms in when used with the FN key
8. **On** Turns devices on and off when pressed
   Input Switches TV input when used with the FN key
9. **Touchpad** Navigates the cursor
10. **Click Button** Functions as a left mouse click
11. **Back** Returns to previous screen
12. **Home** Returns to Google TV home screen
13. **Directional Keys** Navigates Up, Down, Left, and Right
    OK Selects options
14. **Picture-in-picture** Activates and toggles picture-in-picture modes
15. **Favorite** Saves favorite locations
    Record Records, when used with the FN key. (This feature may not be available for all devices.)
16. **Playback** Controls video playback—Rewind, Play, Fast Forward
17. **Ch/Pg Up** Scrolls up through channels or up through web pages when used with the FN key
    Ch/Pg Down Scrolls down through channels or down through web pages when used with the FN key
18. **Menu** Displays Google TV menu options
19. **FN** Enables yellow-highlighted key commands
20. **Search** Launches the Google TV search and navigation bar

Downloaded from www.Manualslib.com manuals search engine

BEFORE CALLING SERVICE

Below is a list of frequently occurred symptoms. Before you call for service, make these simple checks. Some of these symptoms can easily be rectified if you know what to do.

Symptom	What you should do
Colour patch (uneveness)	• Switch off the TV by the mains power button. Wait for 20 minutes before switching on again. • Check the TV is not placed too near speakers or magnetic objects.
No power	• Check the TV's AC power cord is plugged into the mains socket. If there is still no power, disconnect plug. Wait for 60 seconds and re-insert plug. Switch on the TV again.
No picture	• Check the antenna connection at the rear of the TV. • Possible TV station problem. Try another channel.
Good picture but no sound	• Try increasing the volume. • Check that the sound is not muted. If it is muted, press the **Mute** button on the remote control to restore sound.
Good sound but poor colour or no picture	• Try increasing the contrast and brightness setting.
Snowish picture and noise	• Check antenna connection at the rear of the TV.
Horizontal dotted lines	• Possible electrical interference e.g. hairdryer, vacuum cleaner, etc. Switch off appliances.
Double images or "Ghost" images	• Possible poor positioning of antenna. Using a highly directional antenna may improve reception.
TV not responding to remote control handset	• Check life span of batteries of remote control handset. • Aim remote control handset directly at remote control sensor lens on the TV.

15PT2302/p1-4 4 7/6/01, 10:48 AM

Downloaded from www.Manualslib.com manuals search engine

WiFi (Wireless) Setup

Your modem's WiFi has been pre-configured. You'll find the WiFi network name (SSID) and password (Wireless Key) printed on a sticker on the back of your modem.

1. Make sure that WiFi is enabled on your computer, tablet, smartphone or other WiFi device.
2. View the list of available WiFi networks on your WiFi device and select the network that matches the network name on your modem's sticker.
3. Enter the WiFi password (wireless key) exactly as printed on the sticker on the back of your modem.

Note: You may notice there are two WiFi networks present. You may connect to either of these, however most devices will only be compatible with the 2.4GHz network. See the sticker on your modem for more network details.

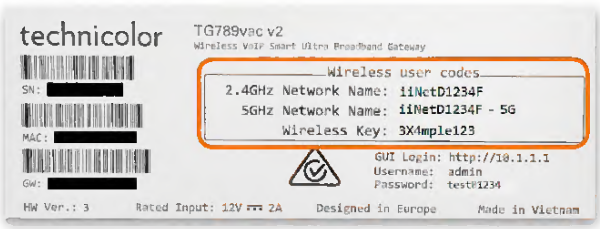

Downloaded from www.Manualslib.com manuals search engine

Colour Television

14PT1324

Product highlights

- *Contrast Plus*
- *Personal Preference Key*
- *Sleeptimer*
- *Plug and Play Installation*

CONTRAST+

SLEEPTIMER

Plug & Play

Remote control unit varies with model

Juntos hacemos tu vida mejor.

PHILIPS

Downloaded from www.Manualslib.com manuals search engine

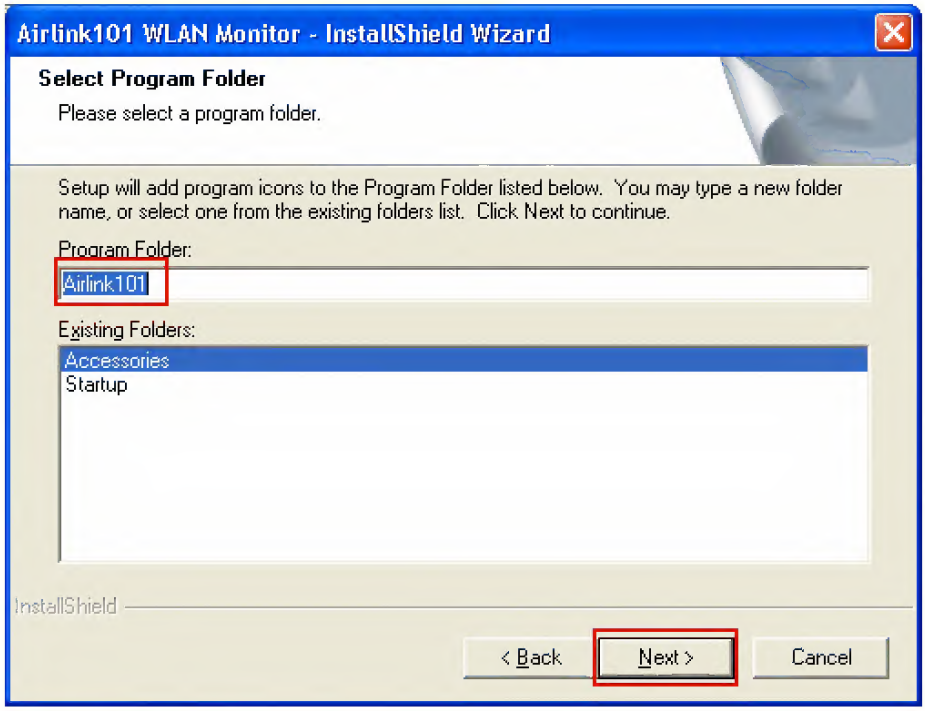
Airlink101 WLAN Monitor - InstallShield Wizard
Select Program Folder
Please select a program folder.
Setup will add program icons to the Program Folder listed below. You may type a new folder name, or select one from the existing folders list. Click Next to continue.
Program Folder:
Airlink101
Existing Folders:
Accessories
Startup
InstallShield
< Back
Next >
Cancel

Step 6 Click **Continue Anyway** at the Windows Logo Screen. (For Windows 2000, click **Yes** at the Digital Signature Not Found prompt).

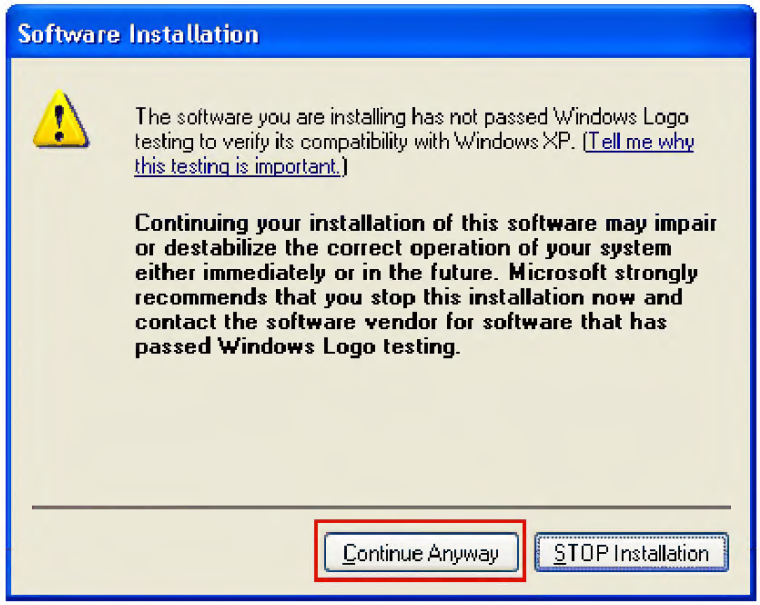
Software Installation
The software you are installing has not passed Windows Logo testing to verify its compatibility with Windows XP. (Tell me why this testing is important.)
Continuing your installation of this software may impair or destabilize the correct operation of your system either immediately or in the future. Microsoft strongly recommends that you stop this installation now and contact the software vendor for software that has passed Windows Logo testing.
Continue Anyway
STOP Installation

For Windows Vista, click the **Install this driver software anyway** button when the security warning appears.

Downloaded from www.Manualslib.com manuals search engine

Appliance Features and Control Panel

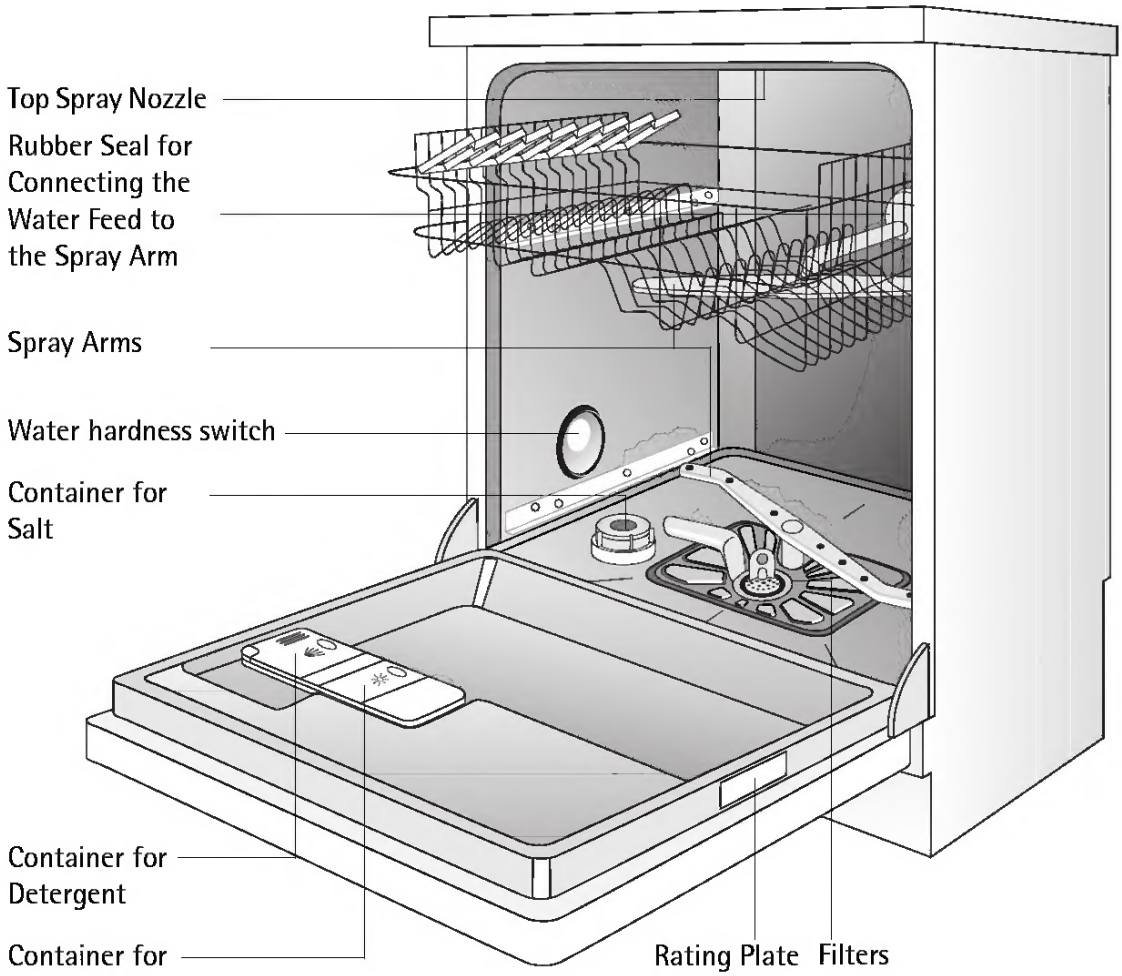

Downloaded from www.Manualslib.com manuals search engine

Allgemeines

Für das D-LIGHT P-System zur Fluoreszenzdiagnostik sind starre Endoskope, Lichtleitkabel und IMAGE1 S Kamerakontrolleinheiten erhältlich, die speziell für die Fluoreszenzdiagnostik modifiziert wurden.

Das D-LIGHT P-System darf nur mit empfohlenem Zubehör verwendet werden.

Die empfohlene Systemzusammenstellung können Sie der Systembeschreibung für KARL STORZ Fluoreszenz Imaging (FI) Systeme entnehmen.

Wie bei nahezu allen Diagnoseverfahren können auch bei der ICG-gestützten Visualisierung falsch-positive und falsch-negative Ergebnisse auftreten. Eine Evaluierung über andere Methoden ist notwendig.

General information

For the D-LIGHT P system for fluorescence diagnostics, rigid endoscopes, fiber light cables and IMAGE1 S camera control units, are especially modified for fluorescence diagnostics.

The D-LIGHT P system may be used only with recommended accessories.

Refer to the system description for KARL STORZ Fluorescence Imaging (FI) Systems for the recommended configuration.

As with virtually all diagnostic methods, false positive and false negative results can also occur in ICG-supported visualization. Validation using other methods is necessary.

Общая информация

Для системы D-LIGHT P, применяемой в целях фотодинамической диагностики, предлагаются жесткие эндоскопы, световодные кабели и блоки управления камерой IMAGE1 S, которые специально модифицированы для флуоресцентной диагностики.

Система D-LIGHT P может использоваться только с рекомендуемыми принадлежностями.

Рекомендуемую комбинацию системы Вы найдете в описании систем флуоресцентной визуализации (ФВ) KARL STORZ.

Как практически при всех методах диагностики, визуализация с применением ICG (индоцианина зеленого) может давать как ложноположительные, так и ложноотрицательные результаты. Требуется оценка с использованием других методов.

FUNCTIONS OF REMOTE CONTROL

⑬ **Main Index Button**
In teletext mode, press button to return to the main index page.

⑭ **Frownie button**
Allows to delete stored personal preference channels in your Personal Preference list. For detailed description of functions, refer to section on "Personal Zapping ".

⑮ **Smart Picture Button**
Press the Smart Picture button repeatedly to access S different types of picture settings and choose your desired setting.

⑯ **Incredible Surround Button**
– Allows you to select Incredible Surround sound when transmission is in stereo mode.
– Allows you to select Spatial Sound when transmission is in mono mode.

⑰ **Cursor Right Button**
Allows you to access the sub-menus and adjust the settings.

⑱ **Cursor Down Button**
Allows you to select the next item on the menu.

⑲ **Channel + / – Buttons**
Allows you to select channels in ascending or descending order.

⑳ **Mute Button**
Mutes sound. To restore sound, press button again.

㉑ **Teletext Button**
Refer to section on "Using the Teletext"

㉒ **OSD button**
Allows you to display the current channel number. It also allows to exit menu from the screen after control adjustments.

㉓ **Digit (0 -9) Buttons**
Press to select a channel. For a 2-digit channel number, press the first digit and followed immediately by the second digit.

㉔ **A/V Button**
Allows you to select the AV channels.

㉕ **Sleeptimer Button**
Allows you to select a time period after which the set will switch to standby mode automatically.

5-11_34PT4323/E 10 03/04/03, 5:34 PM

Downloaded from www.Manualslib.com manuals search engine

Setting up your computer

Aspire T330 is a versatile, high-power system, supporting Intel® Socket 478 CPUs. The computer uses Peripheral Component Interface (PCI) and Accelerated Graphics Port (AGP) design. This improves system efficiency and helps the system support varied multimedia and software applications.

Your Aspire T330 has standard I/O (Input/Output) interfaces such as a parallel port, PS/2 keyboard and mouse ports, the system includes six USB ports, two microphone ports and stereo line-out jacks (one at front and one at rear panel) and a stereo line-in Jack. The system can accommodate extra peripheral equipment through those I/O ports.

Your system can also support an optional high-speed fax/data modem or an additional LAN (local area network) card.

Furthermore, the system is compatible with Windows® XP Home, Windows® XP Professional operating systems.

Necessary to know before Setup

Prior to setting up your Aspire T330 System:

- Select a location
- Open package

Select location

Selecting the optimum location for your computer:

- Don't place the system too close to other electrical equipment.
- Don't place the system in high traffic areas or where the power cord or other cords may be stepped on.
- Avoid placing the system in any location that is excessively dusty or damp.

Open package

Open the package carefully and keep all packing materials for later use.

Downloaded from www.Manualslib.com manuals search engine

The Main Menu

The Main Menu is the default menu that appears in the OLED screen when the Player has been turned ON (see example illustration below).

The Main Menu options include the following "modes":

- Ø Music
- Ø Record
- Ø Voice (Replay)
- Ø FM
- Ø EBook
- Ø System

1. Use the NEXT and PREV buttons to scroll through the "mode" options until you reacb the desired mode.
2. *Press* the MODE button *briefly* once to confirm your selection and enter the relevant mode and its menu.

The function and options available within each of these modes is explained in greater detail in the remainder of this Manual.

Music Mode

Use the Music mode in order to play tracks/files that are on the Player.

Entering the Music Mode

In the Main Menu, use the NEXT and PREV buttons to scroll through the "mode" options until you reach the Music mode.

1. Press the MODE button *briefly once* to confirm your selection and enter the Music mode.

An example of the OLED screen in Music mode is shown below.

Once in the Music mode, you can begin to play tracks/files, as well as enter the File and Play menus.

The File and Play menus are explained in greater detail below.

File Menu (accessed when *not* playing a track or voice file)

After entering the Music or Voice mode, *but without playing a track/file*, press tbe MODE button

Downloaded from www.Manualslib.com manuals search engine

5-5

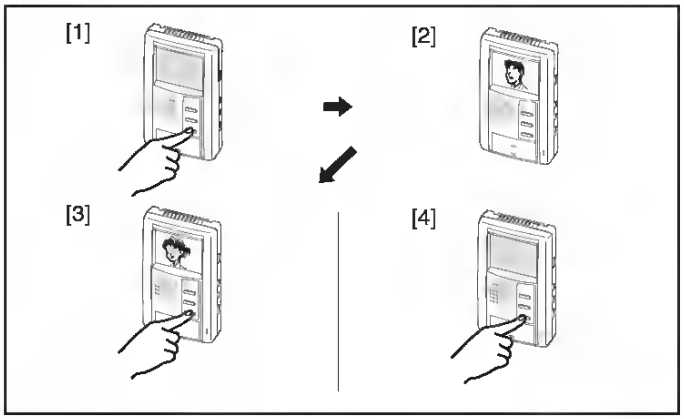

Monitoring door station — English

1. Momentarily depress MONITOR button.
2. Video monitor turns on image of DOOR 1.
3. Press MONITOR button again to switch to DOOR 2.
4. Press MONITOR button to end monitoring.

NOTES: 1. Inside audio can not be heard at door station.
2. Press TALK button to establish talk channel with door station.
3. The monitoring image automatically turns off in approx 1 min.
4. When DOOR 2 is audio-only type (JA-D), it is skipped while monitoring, and audio can not be heard.

Surveillance du poste de porte — Français

1. Appuyer brièvement sur le bouton moniteur.
2. Le moniteur vidéo affiche l'image du portier 1.
3. Appuyer à nouveau sur le bouton moniteur pour passer au portier 2.
4. Appuyer sur le bouton moniteur pour terminer.

REMARQUES: 1. Les bruits intérieurs ne peuvent être entendus de l'extérieur en mode surveillance.
2. Appuyer sur le bouton PAROLE pour établir la communication avec le poste de porte.
3. La surveillance vidéo s'éteint automatiquement après 1 min. environ.
4. Si le portier 2 est du type audio (JA-D) uniquement, il est ignoré pendant la surveillance et le sont ne peut être entendu.

Monitor-Funktion — Deutsch

1. Kurz auf die MONITOR-Taste drücken.
2. Der Monitor zeigt das Bild der TÜRSTELLE 1.
3. Um zur TÜRSTELLE 2 zu gelangen, die MONITOR-Taste erneut drücken.
4. Die MONITOR-Taste erneut drücken, um die Videoüberwachung zu beenden.

HINWEIS: 1. Innengeräusche können an der Türsprechstelle nicht gehört werden.
2. Auf die SPRECH-Taste drücken, um die Sprechverbindung zur Türsprechstelle zu aktivieren.
3. Die Monitor-Funktion schaltet sich automatisch nach ca. 1 Min. ab.
4. Wenn als TÜRSTELLE 2 nur eine JA-D installiert ist, kann von innen keine Verbindung aufgebaut werden.

Monitorear el portero — Español

1. Presione el botón MONITOR momentáneamente.
2. Se encenderá el vídeomonitor y se verá la imagen de PUERTA 1.
3. Presione de nuevo el botón MONITOR para cambiar a PUERTA 2.
4. Presione el botón MONITOR para apagarlo.

NOTAS: 1. El sonido del interior no puede oírse en el portero.
2. Presione el botón HABLA para establecer el canal de comunicación con el portero.
3. La imagen del monitor se apaga automáticamente en 1 minuto aprox.
4. Si la PUERTA 2 es de tipo sólo audio (JA-D), no aparecerá en imagen y tampoco podrá oírse la voz.

Toezicht deurpost — Nederlands

1. Druk kort de MONITOR-knop in.
2. Video-monitor toont beeld van DEUR 1.
3. Druk opnieuw MONITOR-knop in om over te schakelen naar DEUR 2.
4. Druk nogmaals op de MONITOR-knop om te beëindigen.

OPMERKINGEN;
1. Geluid van binnen is niet hoorbaar op de buitenpost.
2. Druk op de SPREEK-knop om spreken met de buitenpost mogelijk te maken.
3. Het beeldscherm wordt na ongeveer 1 min. automatisch uitgeschakeld.
4. Als DEUR 2 enkel een audio-type is (JA-D) wordt deze overgeslagen tijdens het toezicht en wordt het geluid van deze deurpost niet gehoord.

5-6

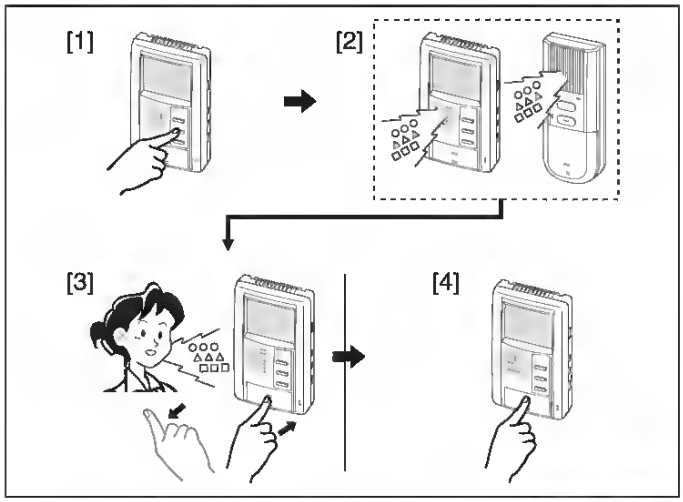

Room-to-Room communication — English

1. Press CALL button once. Call verbally the rest station(s).
2. The called station(s) sounds a pretone and voice.
3. To answer, press TALK button once, and reply handsfree.
4. At the end, press TALK button.

NOTES: Communication is approx. 1 min.-timed.

Communication de pièce à pièce — Français

1. Appuyer une fois sur le bouton d'appel. Appeler verbalement l'(les) autre(s) poste(s).
2. Le(s) poste(s) appelé(s) émettent une pré-tonalité et la voix.
3. Pour répondre, appuyer sur le bouton PAROLE une fois et répondre en mains libres.
4. A la fin, appuyer sur le bouton PAROLE.

REMARQUES: La durée de la communication est d'environ 1 min.

Downloaded from www.Manualslib.com manuals search engine

Choose USB cable to connect the radio controller and mobile device

1. Open Mi Drone APP, select “Next” button

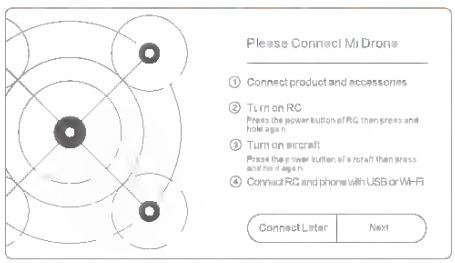
Please Connect Mi Drone
① Connect product and accessories
② Turn on RC
Press the power button of RC then press and hold again
③ Turn on aircraft
Press the power button of aircraft then press and hold again
④ Connect RC and phone with USB or Wi-Fi
Connect Later
Next

2. Pop up dialog box, select “USB connection”, tap “OK” button

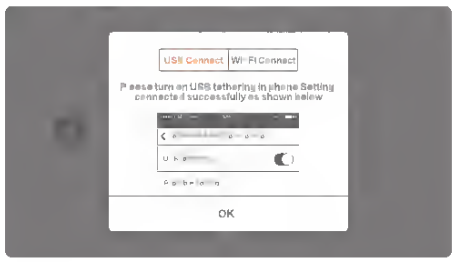

1. Open Mi Drone APP, select “Next” button

CMCC 4G PM 6 52 81%
Tethering & portable hotspot
USB tethering
USB not connected
Portable Wi-Fi hotspot
Set up Wi-Fi hotspot
6x WPA2 PSK Portable Wi-Fi hotspot

2. Pop up dialog box, select “USB connection”, tap “OK” button

Downloaded from www.Manualslib.com manuals search engine

MESSAGES GUIDE DU MD

Français

BLANK
- Rien n'est enregistrè sur le disque.

Prohibit
- L'enregistrement numèrique est interdit par la norme SCMS.
  → Voir "A propos de la norme SCMS (Serial Copy Management System)", page 21.

Can't ED
- Les pistes sont trop courtes pour être combinées.
  → Voir "LIMITATIONS DU MD ", page 77.
- La fonction Combinaison a été utilisée pendant la lecture de la première piste.
- La fonction Division a été utilisée au début d'une piste.
- La fonction Combinaison a été utilisée pour combiner une piste enregistrée en monaural avec une piste enregistrée en stéréo.

Caution!
- L'enregistrement ne peut pas être poursuivi parce que le disque est endommagé.
- Le fonctionnement de l'appareil est anormal.
  → Réinitialisez l'appareil en appuyant sur le bouton RESET sur le dessous.

DISC ERR
- Le disque est rayé.
- Les donnees TOC sont mal consignées.

DISCFULL
- Le temps restant sur le disque est insuffisant pour l'enregistrement.
- Il y a trop de pistes à enregistrer.

Ear GRD!
- Vous ne pouvez plus augmenter le volume avec la fonction EAR GUARD.

HOLD
- Le commutateur HOLD est règlé à HOLD.

NO DISC
- Il n'y a pas de disque dans l'appareil.

NoSignal
- La lecture n'a pas encore commencé sur l'appareil raccordé.
- Le câble numérique optique est mal raccordé.

LOW BATT
- La batterie/les piles sont presque épuisées.

OPEN
- Le logement du disque n'est pas fermé.

PB DISC
- Vous avez essayé d'enregistrer sur un disque prévu uniquement pour la lecture.

PRG FULL
- 25 plages sont déjà programmées et aucune plage ne peut être ajoutée.

PROTECT
- Le disque est protégé contre l'enregistrement.

TMP OVER
- La température ambiante est trop élevée ou trop basse.

TOC FULL
- Il y a trop de pistes ou de données d'accentuation à enregistrer/consigner ou éditer.

VORBEREITUNGEN

Deutsch

Die Kopfhörer anschließen → A

Die mitgelieferten Kopfhörer an die Fernbedienung anschließen, und die Fernbedienung an die Buchse OUTPUT am Gerat anschließen.

HOLD-Schalter → B

Beim Betrieb mit dem Hauptgerät den HOLD-Schalter am Hauptgerat freigeben. → ⓐ
Beim Betrieb mit der Fernbedienung den HOLD-Schalter an der Fernbedienung freigeben. → ⓑ
Bei Nichtgebrauch des Geräts beide auf Stellung HOLD stellen. → ⓒ
Wenn der Schalter in dieser Stellung ist, sind andere Bedientasten am Gerat inaktiv. Wenn Tasten am Gerat gedrückt werden, während der HOLD-Schalter auf HOLD gestellt ist, erscheint die Anzeige „HOLD" im Display.

PREPARATIFS

Français

Raccordement des écouteurs → A

Raccordez les écouteurs fournis à la télécommande et la télécommande à la prise OUTPUT de l'appareil.

Commandes HOLD → B

A la commande à l'appareil, libérez HOLD sur l'appareil. → ⓐ
A la commande avec la télécommande, libérez HOLD sur la télécommande. → ⓑ
Quand l'appareil n'est pas utilisé, réglez les deux commutateurs à la position HOLD. → ⓒ
Les touches pressées par inadvertance resteront sans effet.
Si des touches sur l'appareil sont pressées alors que le commutateur HOLD est sur HOLD, "HOLD" s'affiche.

AM-F75 AEZ EGF Bklet 15 28/4/2000, 6:06 PM

Step 3: Insert your SmartStart and Support Software CD.

Step 4: Insert your Compaq Server Profile diskette.

This is a new feature of SmartStart and ships with your SmartStart CD v4.23.

Step 5: Update firmware (ROMPaqs).

You can easily update the onboard firmware (operating program in ROM) in your Compaq server and for most Compaq options. This is done by *flashing* the ROM, using the special Compaq utilities—System ROMPaq and Option ROMPaq— listed in Table 7. These utilities replace the existing contents of the ROM with an updated version stored on the Compaq SmartStart and Support Software CD.

To obtain even more recent System and Option utilities, you might have to download the SoftPaqs from the Compaq website www.compaq.com/support/files/server/Rompaq/index.html and follow the instructions that accompany the SoftPaqs.

Step 6: Run the Compaq Erase Utility.

Step 7: Cycle power.

Step 8: Select UnixWare 7.1 as your OS.

SmartStart will prompt you to select a language, to set the date and time, to agree to the licensing agreement, and to choose a SmartStart path: Manual or Assisted Integration. (This Integration Note describes the *Assisted Installation* procedure).

Step 9: Configure your system and create System Partition.

With SmartStart, the Compaq System Configuration Utility starts automatically. You should review your current system configuration (see Appendix B) at this time to ensure that no hardware configuration conflicts exist. SmartStart will also automatically create your System Partition.

Of prime importance, you should check if the SCO OpenServer 5.0.5 controller order, Host Bus Adapter (HBA) number, device interrupts, and SCSI IDs match the ones needed for UnixWare 7.1.

System Configuration Procedures

- Select Review and Modify Your System.
- Select Hardware.
- Select View and Edit Details.
- Change the current configuration information to match the configuration from your OpenServer 5.0.5 system: (1) controller order, (2) Host Bus Adapter numbers, (3) device interrupts, and (4) SCSI IDs. See Appendix B.
- Save your configuration and restart your server.

Downloaded from www.Manualslib.com manuals search engine

firmware change and required the EPROM on the interface card to be changed.

Mount Type

Two types of antenna mount may be used with the INTRAC. An Az/El mount or a Polar mount. The appropriate one is selected in "Fitted Options" as AZ/El or Hr-Ang/Declination.

Resolver Type

The INTRAC-305 is intended for use with standard Andrew resolvers, either x2 or x1 versions. Normally the INTRAC-305 is to replace an Andrew APC300 and the antenna will have been fitted with x2 resolvers. Refer to the earlier specification section. This is a user configuration option.

Stow Option

There is provision in the INTRAC-305 configuration for Az/El preliminary and final stow positions to be set.

The "Stow" command causes the antenna to be driven to the preliminary position in both axes. Once at this position the antenna is driven to the final position.

The "Unstow" command causes the pin(s) to be removed (where appropriate) and the antenna driven to the preliminary position.

The preliminary and/or final positions can be set to "not-used" for one or both axes.

Dual Redundant PSU

The INTRAC-305 can be supplied with dual redundant power supplies. In this option the single PSU is replaced by two indepenent PSUs and associated combining hardware. Independent switched power inlets are provided and the front panel power switch is replaced by status LEDs. The INTRAC-305 will operate normally when either or both PSUs are operational. This option must be requiested at time of initial order

Downloaded from www.Manualslib.com manuals search engine

USING THE SURF FEATURE

This feature allows you to create a surf list. You can select up to a maximum of 8 channels and view quickly the selected channels by the control handset.

How to add a channel to the surf list

Press button | **Result on TV Screen**

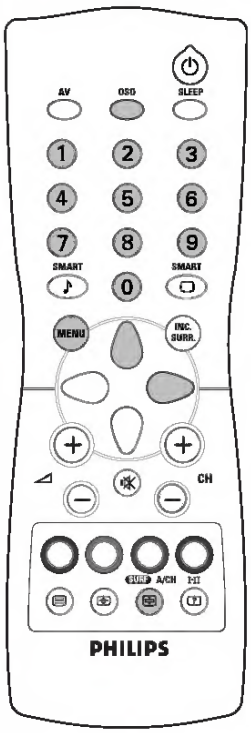

MENU

1. Enter main menu.

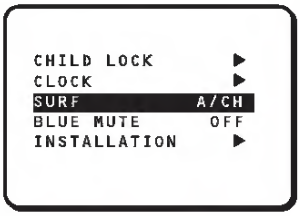

2. Press button repeatedly until **SURF** is selected.

3. Select **SURF** option. After selection of surf option, exit menu from screen by the OSD **(OSD)** button.

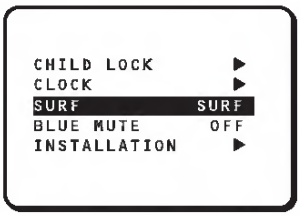

① ② ③
④ ⑤ ⑥
⑦ ⑧ ⑨
⓪

4. Key in the channel number you want to add to the surf list.

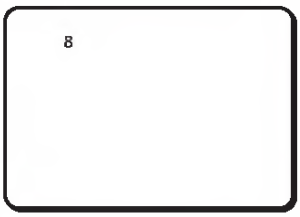

SURF A/CH

5. Add selected channel to the surf list. **"ADDED"** will appear indicating that the selected channel has been added. Repeat steps 4 and 5 to add more channels to the surf list.

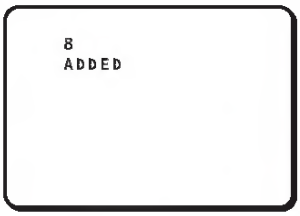

How to delete a channel from the surf list

1. Select the channel you want to delete from the surf list by the **DIGIT (0 - 9)** button.
2. Press the SURF A/CH **(SURF / A/CH)** button to activate deletion of channel.
3. Repeat the above step 1 to 2 if you want to delete more channels from the surf list.

How to view channels from the Surf list

1. Press the SURF A/CH **(SURF / A/CH)** button repeatedly to cycle through the channels and select the channel you want to view.

Downloaded from www.Manualslib.com manuals search engine

PRECAUCIONES

- No se olvide de sacar la cassette del aparato si no piensa seguir escuchando.
- No exponga las cassettes a los rayos del sol, suciedad o polvo. No toque la cinta de la cassette ya que esto puede hacer que se ensucie la superficie de la cinta.
- No deje las cassettes cerca de un motor eléctrico o de un imán. Guárdelas en sus cajas para evitar que aparezcan ruidos y para evitar que disminuya la calidad del tono.
- Utilice una cassette de limpieza para limpiar la cabeza de reproducción y los cabrestantes más o menos una vez al mes. Una cabeza de reproducción sucia hará que los sonidos de tono agudos no se reproduzcan bien.
- No acerque destornilladores, etc u otros objetos metálicos o magnéticos a la cabeza de reproducción.
- Si deja estacionado el coche en un lugar expuesto a los rayos del sol, en verano, el interior del vehículo puede calentarse excesivamente. Espere hasta que baje la temperatura lo suficiente antes de empezar a reproducir una cinta en el aparato.
- Este aparato fue diseñado para funcionar con un sistema eléctrico de CC de 12 voltios con conexión a tierra negativa.
- Cuando tenga que cambiar un fusible, utilice otro que tenga las mismas especificaciones. El uso de un fusible con un amperaje mayor puede provocar daños graves en el aparato.

PRECAUCIONES

- Se ha colocado un forro de protección para el transporte dentro del compartimiento de cassettes.
  Saque sin falta el forro y presione el botón de expulsión antes de utilizar el aparato.

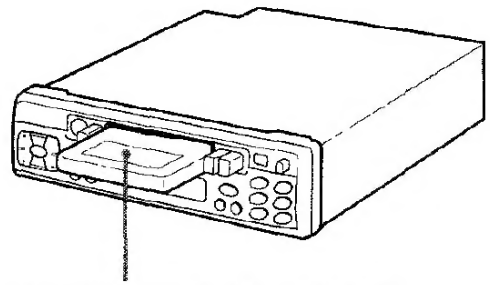

Forro de protección para el transporte

LUZ DE SEGURIDAD

Se puede ver una luz LED en el lado delantero del aparato cuando se desmonta el panel de control. Esta luz permanece destellando para evitar su robo, al girar la llave de encendido a la posición OFF con el panel de control desmontado. Sin embargo, este aparato no posee un sistema de alarma de seguridad sonoro por lo que el dispositivo antirrobo no es completamente seguro

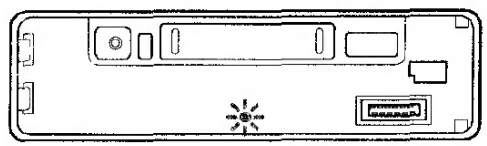

ESPAÑOL

PRECAUCION

No realice modificaciones o ajustes en este producto que no hayan sido aprobados explícitamente por el fabricante porque éstos pueden cancelar el derecho o autorización del usuario para el uso de este producto.

Downloaded from www.Manualslib.com manuals search engine

12 NC COVER : 3111 255 6200.1

Imp. en France SPP

Downloaded from www.Manualslib.com manuals search engine

Workgroup: Enter the name of your Microsoft Network.

Click **Next** to proceed.

Downloaded from www.Manualslib.com manuals search engine